




INDOOR GAS LAMP OPTIONAL CHANDELIER KIT


Model #
MHGLLP B
MHGLLP G

READ INSTRUCTIONS CAREFULLY: Read all information and instructions, including Gas lamp Warning Tag attached to light, before installation or use. Retain this guide for future reference.


AVAILABLE CONFIGURATIONS (LAMPS NOT INCLUDED)

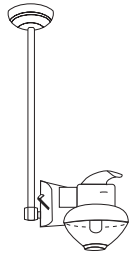


Single lamp

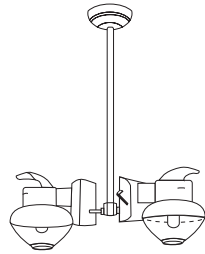

Balanced double lamp

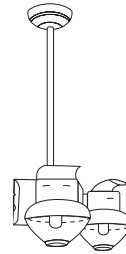

Corner double lamp

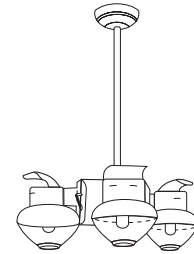

Triple lamp

PARTS LIST AND ASSEMBLY INSTRUCTIONS

For corner double and triple lamp configurations

- Connect 1/8" plug to 2-outlet distributor.
- Attach the 3/8" pipe to 2-outlet distributor.
- Insert 3/8" pipe through ceiling canopy and canopy holding ring.
- Tighten the canopy holding screw.
- Attach the 3-outlet distributor to bottom of 3/8" pipe.
- Use 3 long nipples for triple lamp or 2 long nipples for corner double lamp.
- Attach lamps (not included) elbow joint(s)
- Connect top distributor to gas line.

⚠ Maintain a minimum of 4" clearance to ceiling, wall, or any other combustible surface.

⚠ Gas supply (1/8 NPT female) 3/8" tubing is recommended.

⚠ Before operation, check for any possible leaks and tighten all connections.

Parts List

Item No.	No.	Stock No.	Description
1	3	20360	1/8" NPT pipe plug Used to plug unused ports
2	1	20398	2-outlet distributor Used for balanced double lamp configurations
3	1	20373	Ceiling canopy Conceals opening in ceiling
4	1	20387	Canopy holding ring
5	1	20374	Canopy holding screw
6	1	20355	3/8" x 16" pipe
7	1	20378	3-outlet distributor Used for corner double and triple lamp configurations
8	3	20377	1/8" NPT x 13/16" short nipple Used for double lamp configurations
	3	20379	1/8" NPT x 1 1/2" long nipple Used for triple lamp configurations
9	3	20348	1/8" FPT x 1/8" MPT elbow joint Connects into valve of light

For balanced double and single lamp configurations

- Connect 2 1/8" plugs to 3-outlet distributor.
- Attach the 3/8" pipe to 3-outlet distributor.
- Insert 3/8" pipe through ceiling canopy and canopy holding ring.
- Tighten the canopy holding screw.
- Attach the 2-outlet distributor to bottom of 3/8" pipe.
- Use 2 short nipples for balanced double lamp or 1 short nipple for single lamp.
- Attach lamps (not included) to elbow joint(s)
- Connect top distributor to gas line.

